


42006637-003 R1

Installation Guide

for EHE0200155 Room Thermostat


1. Find a suitable location for mounting

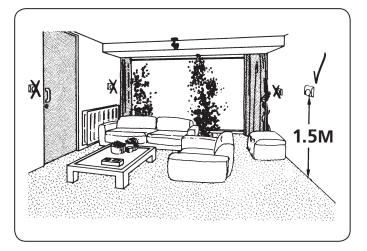


CAUTION: Disconnect system power supply before removing cover.

2. Remove the cover from the backplate

3. Mount the backplate to wall

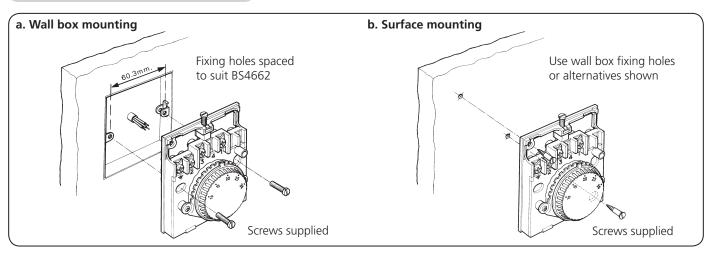


4. Wiring options

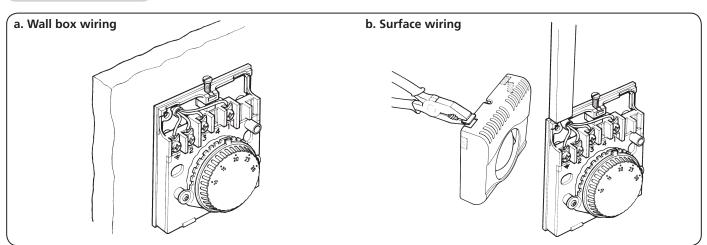


For latest prices and delivery to your door visit MyTub Ltd - www.mytub.co.uk - info@mytub.co.uk 0844 556 1818

5. Connect the wiring correctly

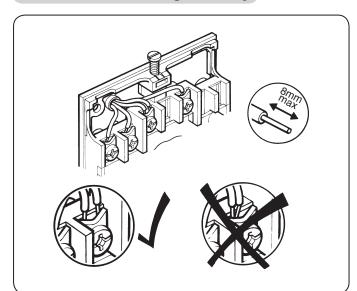

6. Attach the cover to the backplate

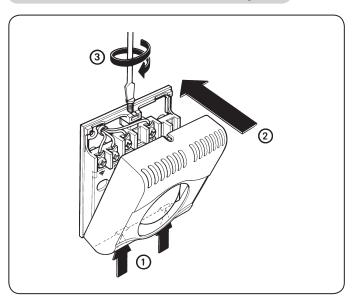

7. Wiring diagram

All wiring must be in accordance with I.E.E. Regulations. This thermostat is for fixed wiring only.


A Class 'A' switch (having contact separation of at least 3mm in all poles) must be incorporated in the fixed wiring as a means of disconnecting the mains supply.

The thermostat is a Class II (double insulated) device. An earth terminal is provided for external earth wiring continuity.

The heating system must be appropriately fused. A fuse rated at no more than 10 Amps should be installed.

The thermostat has 4 knockouts on the cover for surface wiring installations. Care must be taken to use the knockouts so that the cable completely fills the knockout hole without leaving any gaps. Where used, mini-trunking must be fitted firmly against the thermostat cover in such a way as to leave no gap.

A neutral connection must be made to terminal 2 when the heating load is less than 6 Amps.

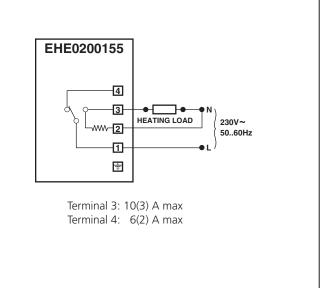

IMPORTANT! No user serviceable parts. Do not dispose of in a fire.

For further information telephone 0870 8506538

Whilst every care has been taken to ensure that the information included in this document was accurate at the time of printing, we reserve the right to change specifications at any time. The photographs reproduced in this publication are within the constraints of the printing process and are NOT to be used for matching purposes. E&OE.

a **WOLSELEY** company Ref:4277

