



AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces.

All surface finishes will wear if not cleaned correctly, the only safe way to clean your fitting is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture.

As gold and special effect finishes are softer than chromium plate, special care must be taken when cleaning, a 3 year guarantee covers these finishes.

NOTE: - the 5 year guarantee is invalidated if damaged by any waterborne debris.

PRODUCT CODE: FH3 C / ST

TELEPHONE HELP LINE! +44 (0) 870 4425553

Bristan Limited
Birch Coppice Business Park
Dordon
Tamworth
Staffordshire
B78 1SG
UK

Web site: www.bristan.com
Telephone: +44 (0) 870 4425556
Facsimile: +44 (0) 870 4425554
Email: enquire@bristan.com
(FI FH3 11/03/02 MZ)



Quadrant Fixed Head

Fitting Instructions

Please keep these instructions for future reference

For latest prices and delivery to your door visit MyTub Ltd 0845 303 8383 www.mytub.co.uk

This fixed head is intended to be used in conjunction with other products, such as the blending valves, diverters and stopcocks from the Bristan Quadrant range in order to create a system to suit your requirements.

COMPONENTS

1. Fixed arm
2. Wall plate
3. Swivel
4. Rose

INSTALLATION

The fixed head should be arranged in your system with a supply of mixed water.

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Depending on application the fixed head can be panel mounted using a backnut and washer or set into the wall on rigid pipe work.
3. Slide on wall plate and connect the fixed head's 1/2" BSP tail to pipe work using recommended 1/2" BSP connections (not provided) with thread sealing compound where necessary.

NOTE: - Before finishing wall turn on water supplies to check both correct system function and for leaking from joints/connections.

4. Complete wall finish and slide wall plate up to wall.
5. See over the page for aftercare instructions.

MAINTENANCE

1. To remove the faceplate (7) from the rose (4), unscrew the nuts (5) from around the nozzles.
2. Unscrew the rose from the swivel (3).
3. Clean the nozzles and faceplate seal (6).
4. Clean and grease the swivel seal.
5. Reassemble faceplate and screw rose back into the swivel.

