

AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces. All surface finishes will wear if not cleaned correctly, the only safe way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture. As gold and special effect finishes are softer than chromium plate, special care must be taken when cleaning; a 3 year guarantee covers these.

NOTE: The 5 year guarantee on the valves is invalidated if damaged by any waterborne debris.

In the interests of continuous product development we reserve the right to alter specification as necessary.

TELEPHONE HELPLINE: 0844 701 6273

Bristan Group Ltd
Birch Coppice Business Park
Dordon
Tamworth
Staffordshire
B78 1SG
UK
A Masco Company

Web Site: www.bristan.com

Telephone: 0844 701 6273

Facsimile: 0870 701 6275

Email: enquire@bristan.com

(FI 3HBASBID)

(Rev. D3)

(U)

BRISTAN

3 Hole Basin and Bidet Mixer

Fitting Instruction

**Please keep these instructions for future reference
and for the ordering of spare parts.**

WATER PRESSURE

This mixer is suitable for use at all supply pressures. If the fitting is installed at low pressure (tank fed), then the minimum height from the outlet of the nozzle to the underside of the cold tank should be 1.8 metre to ensure adequate performance. This mixer should be installed in compliance with the Water Byelaws. Where the supplies are unbalanced, i.e. hot water from cylinder tank / cold from the mains, approved check valves must be fitted in the supply pipes. For further details contact your Local Water Authority.


THREE HOLE BASIN MIXER

1. Identify all the components and check for completeness, particularly before arranging installation.
2. Fit the centre nozzle and side bodies to the basin using the nuts, washers and cover flanges.
3. Fit the centre tee to the nozzle.
4. Tighten nut on centre tee as shown on diagram to prevent any leaking around pop-up rod and tube.
5. Connect centre tee to side bodies using flexible hoses and washers (looping hoses to fit as shown in diagram).
6. Fit the valves to the side bodies, (if not already fitted).
7. Fit the handles.
8. Fit the waste.
9. Fit the pop-up waste rod and connect it to the waste, adjust to open and close.
10. Connect hot and cold supplies; fully open both valves, letting them run for a few minutes to flush the system.
11. Check all joints and connections for leaks.

THREE HOLE BIDET MIXER

1. Identify all the components and check for completeness, particularly before arranging installation.
2. Fit the centre sub-assembly and side bodies to the bidet using the nuts, washers and cover flanges.
3. Tighten nut on centre sub-assembly as shown on diagram to prevent any leaking around the rod, then fit using nuts and washers.

4. Connect centre sub-assembly to side bodies using flexible hoses and washers (looping hoses to fit as shown in diagram).
5. Fit the valves to the side bodies, (if not already fitted).
6. Fit the handles.
7. Fit the waste.
8. Fit the spray outlet.
9. Connect the spray outlet to the centre sub-assembly using the flexible connector and sealing washers.
10. Fit the pop-up waste rod and connect it to the waste, adjust to open and close.
11. Connect hot and cold supplies; fully open both valves, letting them run for a few minutes to flush the system.
12. Open both valves select the spray mode and adjust the height of the spray. This is adjusted by removing the centre spray plate and turning the adjusting screw underneath.
13. Check all joints and connections for leaks.

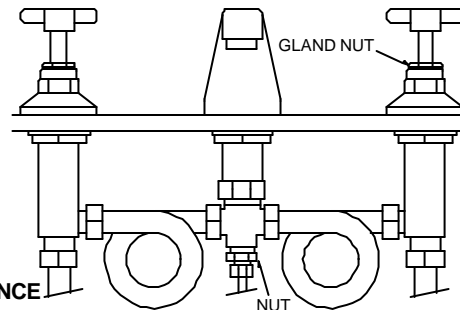

MAINTENANCE

Traditional valve type: - If the fitting leaks from the spindle

1. Remove fitting head and shroud (if necessary).
2. Tighten gland nut as shown in diagram.

All valve types: - If the fitting begins to drip

1. Turn off the water supply.
2. Remove fitting head and valve.
3. Carefully clean seating and rubber washer.
4. Replace valve and turn on the water supply.
5. Contact our helpline if problem persists.