

## AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces. All surface finishes will wear if not cleaned correctly, the only safe way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

## GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture. As gold and special effect finishes are softer than chromium plate, special care must be taken when cleaning; a 3 year guarantee covers these finishes.

**NOTE:** The 5 year guarantee on the valves is invalidated if damaged by any waterborne debris.

*In the interests of continuous product development we reserve the right to alter specification as necessary.*

## TELEPHONE HELP LINE: 0844 701 6273

Bristan Group Ltd  
Birch Coppice Business Park  
Dordon  
Tamworth  
Staffordshire  
B78 1SG  
UK  
A Masco Company

Web Site: [www.bristan.com](http://www.bristan.com)  
Telephone: 0844 701 6273  
Facsimile: 0844 701 6275  
Email: [enquire@bristan.com](mailto:enquire@bristan.com)

(FI ON BSM)

(Rev. D4)

(U)

# BRISTAN

## Options Bath Shower Mixer

## Fitting Instructions & Contents List

**Please keep these instructions for future reference  
and for the ordering of spare parts.**



For latest prices and delivery to your door visit MyTub Ltd 0845 303 8383 [www.mytub.co.uk](http://www.mytub.co.uk)


## WATER PRESSURE

This mixer is suitable for use at all supply pressures. However for optimum use both the hot and cold supplies should be reasonably balanced. If the fitting is installed at low pressure (tank fed), then the minimum distance from the outlet of the nozzle to the underside of the cold tank should be 2 metres to ensure adequate performance. This equates to a minimum operating pressure of 0.2 bar and 0.1 bar to the handset – to ensure adequate shower performance.

This mixer should be installed in compliance with Water Regulations. Where the supplies are unbalanced, i.e. hot water from the cylinder tank / cold from the mains, approved check valves must be fitted in the supply pipes. For further details contact your Local Water Authority.

## CONTENTS

- |                         |      |
|-------------------------|------|
| 1. Backnut.             | (x2) |
| 2. Rubber Washer.       | (x2) |
| 3. Body.                | (x1) |
| 4. Small rubber washer. | (x2) |
| 5. Hose.                | (x1) |
| 6. Handset.             | (x1) |

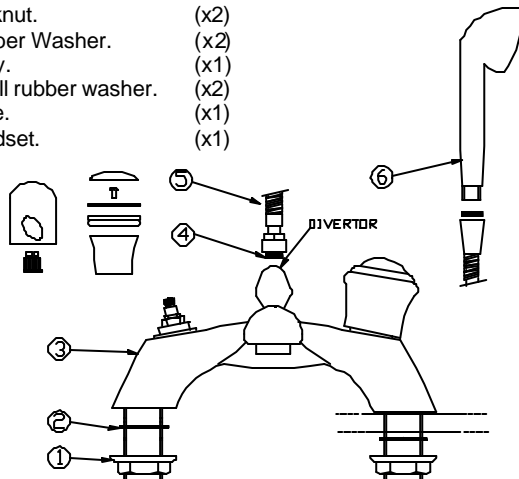

**Please Note:** In the unlikely event you find a part missing please contact our Customer Service Helpline on 0844 701 6273 for immediate dispatch of part.

## INSTALLATION

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Fit the mixer body (3) to the bath using washers (2) and the backnuts (1), below the bath, and then connect the hot and cold water supplies.
3. Fit tap handles. Fitting varies depending on handle. Either disassemble handle and use screw hidden under cap or secure plastic adaptor to valve with screw and then push on handle.  
**NOTE:** Handles must be bought separately.
4. Attach hose (5) to the body (3) using small washer (4). Then attach the handset (6) to the hose using small washer.
5. Fully open the mixer valves, letting them run for a few minutes, operating the diverter to check the handset and hose. Check all joints and connections for leaks.
6. Measure and mark out the drill holes for the handset holder in relation to the mixer, ensuring the handset will reach.
7. Drill the wall to suit wall plugs supplied.



Prior to drilling into walls, check there are no hidden electrical wires, cables or water supply pipes with the aid of an electronic detector. If you use power tools do not forget to:

- Wear eye protection
- Unplug equipment after use

8. Fix handset holder to the wall.
9. See over page for aftercare instructions.

## MAINTENANCE

### If the fitting begins to drip:

1. Isolate water supplies.
2. Disassemble/remove handle, unscrew retaining screw and lift off the handle.
3. Unscrew the valve. Carefully clean seating, rubber washer and/or ceramic disc.
4. Refit the valves, handles and tighten retaining screw. Replace the top of the handle or handle indices.
5. If problem persists contact our helpline quoting the product code.