



For latest prices and delivery to your door visit MyTub Ltd 0845 303 8383 www.mytub.co.uk

## AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces.

All surface finishes will wear if not cleaned correctly, the only safe way to clean your bath filler is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting even the non-scratch cleaners.

## GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture.

As gold and special effect finishes are softer than chromium plate, special care must be taken when cleaning; a 3 year guarantee covers these finishes.

**NOTE: - The 5 year guarantee on the valves is invalidated if damaged by any waterborne debris.**

**PRODUCT NAME:**

**PRODUCT CODE:**

**TELEPHONE HELP LINE! 0844 701 6273**

Bristan Group Limited  
Birch Coppice Business Park  
Dordon  
Tamworth  
Staffordshire  
B78 1SG  
UK

Web Site: [www.bristan.com](http://www.bristan.com)  
Telephone: 0844 701 6274  
Facsimile: 0844 701 6275  
(FI PBF) (D3) (U)

# BRISTAN

## Pillar Mounted Bath Filler

## Fitting Instructions


Please keep these instructions for future reference and for the request of spare parts



## WATER PRESSURE

This mixer is suitable for use at all supply pressures. However for optimum use both the hot and cold supplies should be reasonably balanced. If the fitting is installed at low pressure (tank fed), then the minimum distance from the outlet of the nozzle to the underside of the cold tank should be 1.8 metre to ensure adequate performance.

This mixer should be installed in compliance with the Water Byelaws. Where the supplies are unbalanced, i.e. hot water from cylinder tank / cold from the mains, approved check valves must be fitted in the supply pipes. For further details contact your Local Water Authority.

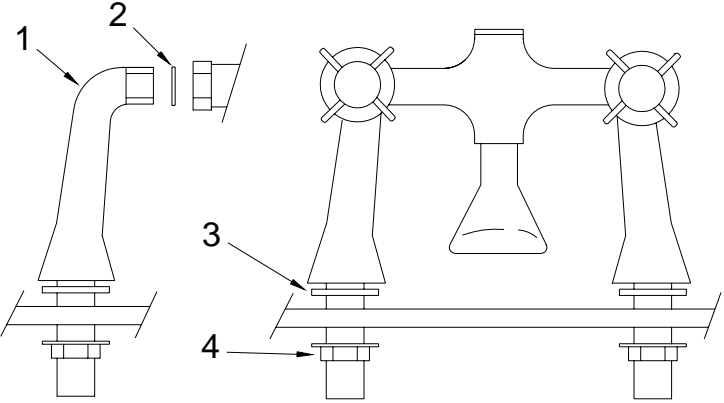

## INSTALLATION

1. Identify all components and check for completeness, particularly before arranging installation.
2. Fit the legs (1) to the body using the large sealing washers (2).
3. Fit the mixer to the bath using the backnuts (4) and washers (3); connect the hot and cold water supplies.
4. Fully open both valves, letting them run for a few minutes to check all joints and connections for leaks.
5. See over the page for aftercare instructions.

**N.B. please write the name and product code of your fitting in the spaces provided overleaf. This will ensure a speedier service if you should need to phone the help line.**

## MAINTENANCE

**Sureflow type valves:** - If the fitting self-opens

1. Remove fitting head.
2. Tighten gland nut on top of valve.

**Traditional type valves:** - If the fitting leaks from the spindle

1. Remove fitting head (if necessary).
2. Tighten gland nut on top of valve.

**All valve types:** - If the fitting begins to drip

1. Turn off the water supply.
2. Remove fitting head and valve.
3. Carefully clean seating and rubber washer.
4. Replace valve and turn on the water supply.
5. Contact our helpline quoting product code if problem persists.

## Please Note: -

In the unlikely event you find a part missing please contact our customer Service Help line on 0844 701 6274 for immediate dispatch of part.