

Technical data sheet

Rotary actuator SR230A-5

Rotary actuator for butterfly valves

- Torque 20 Nm
- Nominal voltage AC 100 ... 240 V
- Control: Open/close or 3-point



Technical data

Electrical data	Nominal voltage	AC 100 240 V, 50/60 Hz
	Power supply range	AC 85 265 V
	Power consumption In operatio	n 2.5 W at nominal torque
	At rest	0.4 W
	For wire size	ring 6 VA
	Connection	Cable 1 m, 3 x 0.75 mm ²
	Parallel connection	Possible, note performance data
Functional data	Torque (nominal torque)	Min. 20 Nm at nominal voltage
	Manual override	Gearing latch disengaged with pushbutton
		(temporary-permanent)
	Running time	90 s / 90° ∢
	Noise level	Max. 45 dB (A) (without the valve)
	Position indication	Mechanical, integral
Safety	Protection class	II Totally insulated
	Degree of protection	IP54 in any mounting position
	EMC	CE according to 89/336/EEC
	Low voltage directive	CE according to 73/23/EWG
	Mode of operation	Type 1 (to EN 60730-1)
	Rated impulse voltage	4 kV (to EN 60730-1)
	Control pollution degree	3 (to EN 60730-1)
	Ambient temperature range	0 +50 °C
	Media temperature	-20 +100°C (in butterfly valve)
	Non-operating temperature	-40 +80°C
	Ambient humidity range	95% r.H., non-condensating (to EN 60730-1)
	Maintenance	Maintenance-free
Dimensions / Weight	Dimensions	See «Dimensions» on page 2
	Weight	Approx. 1000 g

Safety notes



• The rotary actuator has been designed for use in stationary heating, ventilation and air conditioning systems and is not allowed to be used outside the specified field of application, especially in aircraft or in any other airborne means of transport.

- Caution power supply voltage!
- It may only be installed by suitably trained personnel.

All applicable legal or institutional installation regulations must be complied with.


- The switch for changing the direction of rotation may only be operated by authorized personnel. The direction of rotation must not be reversed in a frost protection circuit.
- The device may only be opened at the manufacturer's site. It does not contain any parts that can be replaced or repaired by the user.
- · The cable must not be removed from the device.
- The device contains electrical and electronic components and is not allowed to be disposed
 of as household refuse. All locally valid regulations and requirements must be observed.

www.belimo.com

For latest prices and delivery to your door visit MyTub Ltd - 0845 303 8383 - www.mytub.co.uk - info@mytub.co.uk



Product features		
Simple direct mounting	Straightforward direct mounting on the ball valve with assembly tool is integrated in the plug-on position in the ball valve can be selected in 90° steps.	
High functional reliability	The actuator is overload-proof, requires no limit switches and automatically stops when the end stop is reached.	
ISO 5211 - F05 Butterfly valve D6	For BELIMO F05 butterfly valve D6 and other damper specifications: - Square stem head (14 mm) for form-fit attachment - Hole circle (d = 50 mm) for assembly with the butter	of the rotary actuator.
Accessories		
	Description	Data sheet
Electrical accessories	Auxiliary switch SA	T2 - SA
	Feedback potentiometer PA	T2 - PA
Electrical installation		
Wiring diagram	Open-close control	3-point control
Notes • Caution power supply voltage. • Parallel connection of other actuators possible. • Direction of rotation switch is covered. Factory setting: Direction of rotation Y2	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	$ \begin{array}{c c} \mathbf{N} & \mathbf{L1} \\ & & 0 \\ & & 0 \\ & & 1 \\ & & 1 \\ & & 2 \\ & & 3 \\ & & & 1 \\ & & & 1 \\ & & & 1 \\ & & & 1 \\ & & & & 1 \\ & & & & 1 \\ & & & & & 1 \\ & & & & & 1 \\ & & & & & 1 \\ & & & & & 1 \\ & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & & & 1 \\ & & & & 1 \\ & & & & & 1 \\ & & & & 1 \\ & & & & 1 \\ & & & & 1 \\ & & & $
Direction of rotation	Y2 Rotary actuator Y2 Y2 A - AB = 0	VOV1
Dimensions [mm]		
Dimensional diagrams		

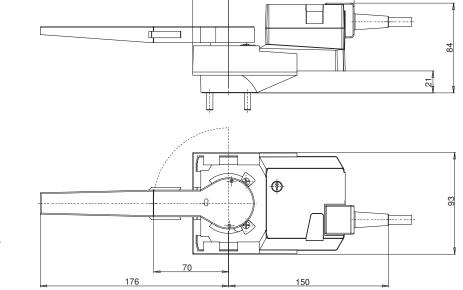


The 2-figure position indication (lever) can be reduced to 70 mm. The front part of the lever should be fixed to the cable (clip).


Further documentations	 Complete overview of actuators for water solutions Data sheets for butterfly valves Installation instructions for actuators and/or ball valves Notes for project planning (hydraulic characteristic curves and circuits, installation regulations, commissioning, maintenance etc.)

For latest prices and delivery to your door visit MyTub Ltd - 0845 303 8383 - www.mytub.co.uk - info@mytub.co.uk




70609-00001.D

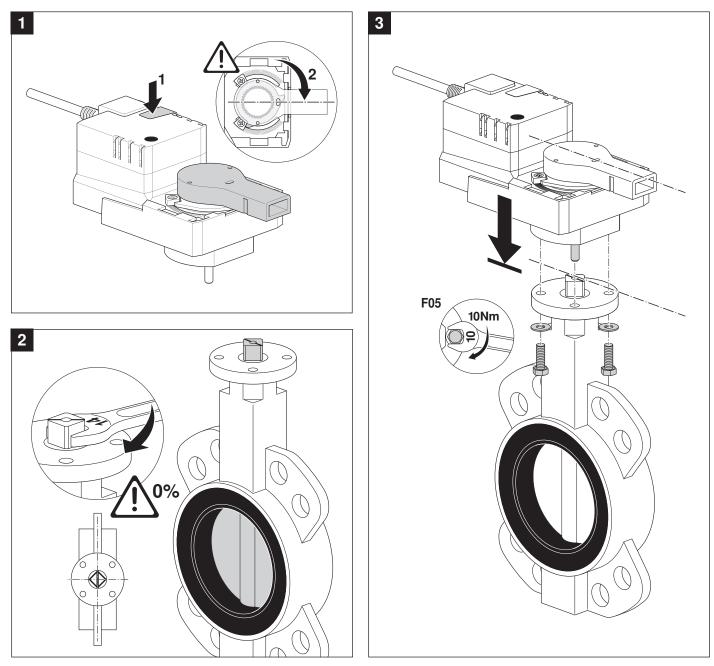


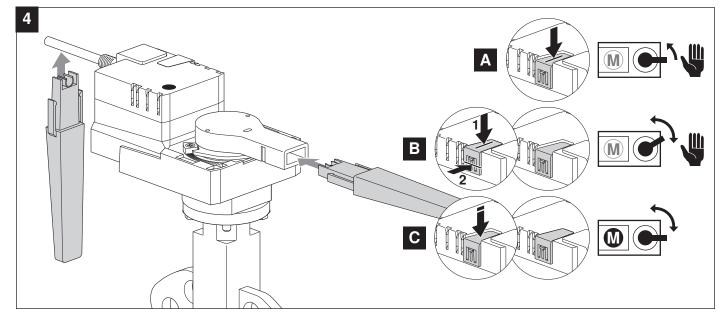


M5-SR..A-5 • v1.1 • 07.2009 For latest prices and delivery to your door visit MyTub Ltd - 0845 303 8383 - www.mytub.co.uk - info@mytub.co.uk



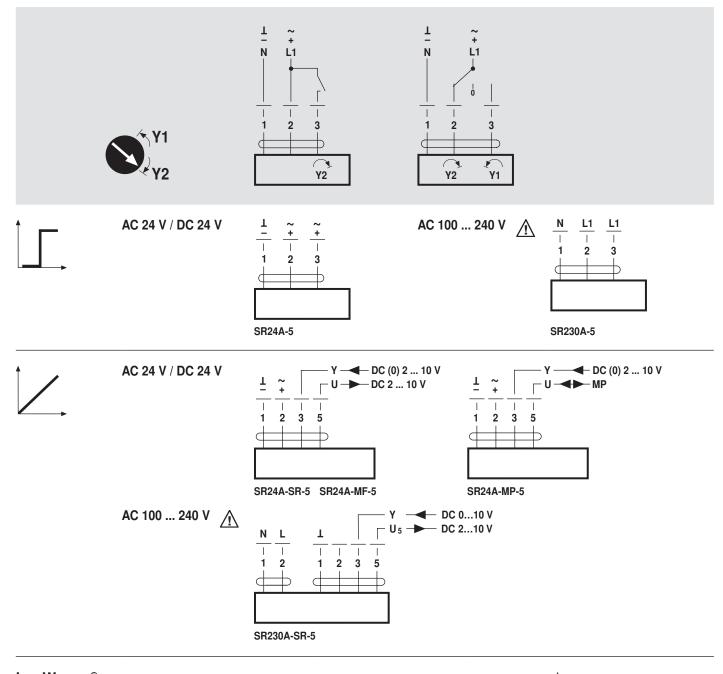



2/2

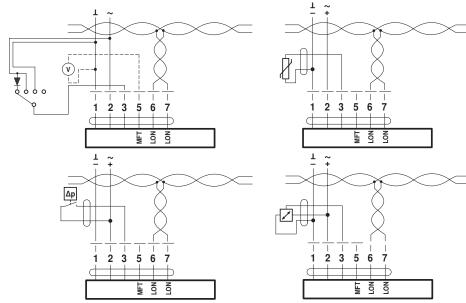

M5-SR..A-5 • v1.1 • 07.2009