

Concetto

Design & Quality Engineering GROHE Germany


99.150.031/ÄM 217797/04.10



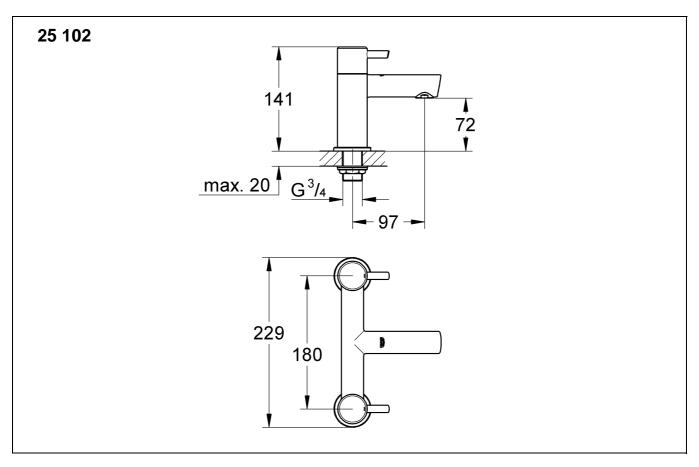

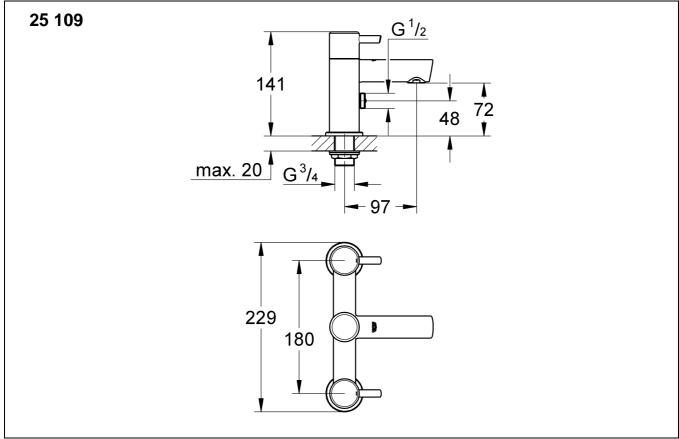

Please pass these instructions on to the end user of the fitting!

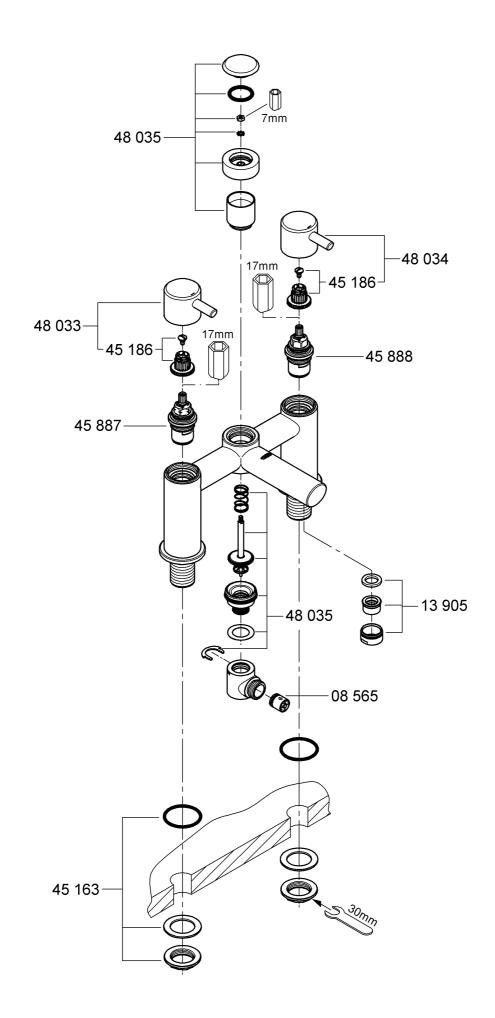



Application

Can be used in conjunction with: Pressurised storage heaters, thermally and hydraulically controlled instantaneous heaters. Operation with low-pressure displacement water heaters is not possible.

Specifications

· Minimum flow pressure

· Maximum operating pressure

Test pressure

If static pressure is greater than 5 bar, fit pressure reducer. Avoid major pressure differences between cold and hot water supply.

• Flow rate at 0.1 bar flow pressure with flow straightener:

approx. 15 l/min

Temperature

- Hot water inlet (maximum):

80 °C

Recommended (energy saving):

60 °C

Water connection

cold - right hot - left

New Water Regulations

This GROHE fitting with shower is equipped with single nonreturn valve. Please ensure installation complies with New Water Regulations covering backflow protection. It must also be installed in accordance with local bye-law requirements.

I.Ceramic catridge, see Fig. [4].

- 1. Pull off handle (B).
- 2. Unscrew screw (C) and pull off snap insert (D).
- 3. Unscrew ceramic catridge (E) using a 17mm socket wrench.
- Change complete ceramic catridge (E).

Observe the different replacement part numbers of the ceramic catridges, see fold-out page II.

Assemble in reverse order.

0.1 bar II. Diverter assembly, see Fig. [5].

- 10 bar 1. Lever out cap (F).
- 16 bar 2. With 7mm socket wrench, unscrew and remove nut (G).
 - 3. Pull off diverter knob (H) and unscrew cap (J).
 - 4. Remove circlip (K) and pull off connection nipple (L) with seal (M).
 - 5. With 12mm Allen key, remove outlet nipple (N).
 - 6. Remove spindle (O) with spring (P).

Assemble in reverse order.

III. Non-return valve, see Fig. [5].

Pull out non-return valve (R).

Assemble in reverse order.

IV. Flow straightener, see fold-out page II.

Unscrew and clean flow straightener (13 905).

Assemble in reverse order.

Installation

Flush piping system prior and after installation of fitting thoroughly (Consider EN 806)!

Bathtub rim mounting

Use mounting set to install the fitting, see fold-out page III,

Refer to the dimensional drawings on fold-out page I.

The cold water supply must be connected on the right and the hot water supply on the left.

Open cold- and hot water supply and check connections for leakage!

Check fitting for correct function, see Fig. [2].

Function of automatic diverter (A), see Fig. [3].

Turning the handle will release water delivery.

Water will emerge from the bath outlet first.

= to divert flow from bath inlet Pull diverter knob

to shower outlet

Flow is diverted automatically from shower outlet to bath inlet when the fitting is closed.

Maintenance

Inspect and clean all parts, replace if necessary and grease with special grease.

Shut off cold and hot water supply!

Replacement parts, see fold-out page II (* = special accessories).


Care


Dear Customer,


We want to ensure that you get long-lasting satisfaction and pleasure from your GROHE fitting. Therefore, please read the following care instructions because damage to the surface and underlying material resulting from improper treatment is not covered by warranty.


Do not use any abrasive sponges or scouring agents for cleaning. We also advise you not to use cleaning agents containing solvent or acid, limescale removers, household vinegar and cleaning agents with acetic acid in them. They are aggressive to the surface - and will leave your fitting dull and scratched. As the formulations of commercially available cleaning agents frequently change, we cannot guarantee they will provide the gentle care our fitting deserves.


Clean the fitting with a little soap and a moist cloth only, then simply rinse off and wipe dry. You can avoid lime spots by drying the fitting each time it is used. If lime deposits do occur, remove them with **GrohClean**, our environment-friendly cleaning liquid. GrohClean is specially formulated to clean the surface of our fittings gently. **GrohClean** is available from your supplier.

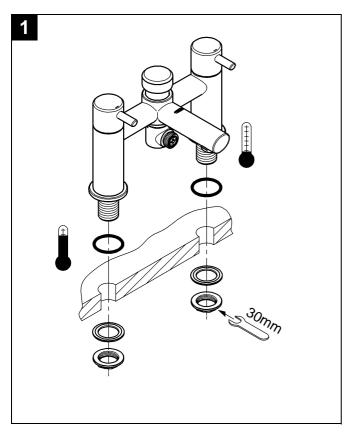

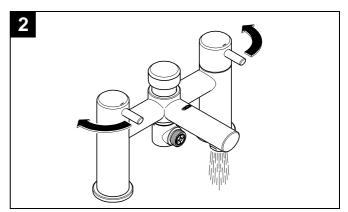

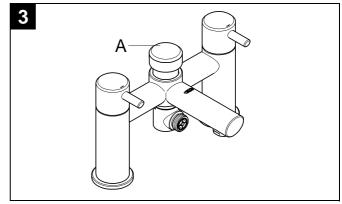

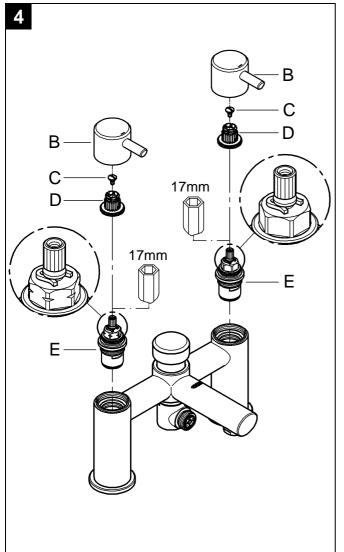

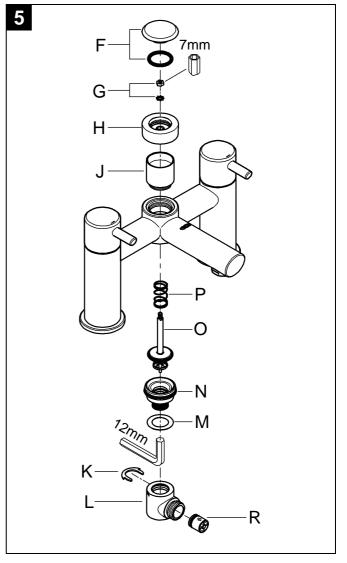



Grohe Deutschland Vertriebs GmbH Zur Porta 9 32457 Porta Westfalica Tel.: +49 571 3989-333 Fax: +49 571 3989-999



GROHE Ges.m.b.H. Wienerbergstraße 11/A7 1100 Wien

Tel.: +43 1 68060 Fax: +43 1 6884535



GROHE nv - sa Diependaalweg 4a 3020 Winksele Tel.: +32 16 230660 Fax: +32 16 239070



Търговско представителство Grohe AG България Бизнес център Слатина Ул. Слатинска 1 1574 София

Тел. : +359 2 9719959 +359 2 9712535 Факс.: +359 2 9712422

(CDN)

GROHE Canada Inc. 1230 Lakeshore Road East Mississauga, Ontario Canada, L5E 1E9 Tel.: +1 905 2712929 Fax: +1 905 2719494



Grohe Switzerland SA Oberfeldstrasse 14 8302 Kloten

Tel.: +41 44 8777300 Fax: +41 44 8777320



高仪(上海) 卫生洁具有限公司 宁桥路615号 201206 上海 中华人民共和国 电话: +86 21 50328021 传真: +86 21 50550363



GROME Marketing (Cyprus) Ltd. 195B, Old Nicosia-Limassol Road Dhali Industrial Zone P.O. Box 27048 1641 Nicosia

Tel.: +357 22 465200 Fax: +357 22 379188



Grohe ČR s.r.o. Zastoupení pro ČR a SR V Oblouku 104, Čestlice 252 43 Průhonice Tel.: +420 22509 1082

Fax: +420 22509 1085

(DK)

GROHE A/S Walgerholm 11 3500 Vaerløse

Tel.: +45 44 656800 Fax: +45 44 650252



GROHE España S.A. C/ Botanica, 78 - 88 Gran Via L'H - Distr. Econòmic 08908 L'Hospitalet de Llobregat (Barcelona)

Tel.: +34 93 3368850 Fax: +34 93 3368851

 $(\mathsf{EST})(\mathsf{LT})(\mathsf{LV})$

GROHE AG Eesti filiaal Tartu mnt 16 10117 Tallinn Tel.: +372 6616354

Fax: +372 6616364



GROHE s.à.r.l. 60, Boulevard de la Mission Marchand 92400 Courbevoie - La Défense Tel.: +33 1 49972900 Fax: +33 1 55702038



Oy Teknocalor Ab Sinikellonkuja 4 01300 Vantaa Tel.: +358 9 8254600 Fax: +358 9 826151



GROHE Limited Blays House, Wick Road **Englefield Green** Egham, Surrey, TW20 0HJ Tel.: +44 871 200 3414 Fax: +44 871 200 3415



N. Sapountzis S.A. 86, Kapodistriou & Roumelis Str. 142 35 N. Ionia - Athens Tel.: +30 210 2712908 Fax: +30 210 2715608



GROHE Hungary Kft. Röppentyü u. 53. 1139 Budapest Tel.: +36 1 238 80 45 Fax: +36 1 238 07 13



GROHE AG - Predstavništvo Štefanovečka 10 10000 Zagreb

Tel.: +385 1 2989025 Fax: +385 1 2910962 ı

GROHE S.p.A. Via Castellazzo Nr. 9/B 20040 Cambiago (Milano) Tel.: +39 2 959401 Fax: +39 2 95940263



Grohe India Private Limited The Great Eastern Centre Gesco Corporate Centre 70 Nehru Place New Dehli 110019 Tel.: +91 11 5561 9423 / 9513

Fax: +91 11 5561 9451



Skemmuvegi 2 200 Kópavogur Tel.: +354 515 4000 Fax: +354 515 4099



Grohe Japan Ltd. TRC Building, 3F 1-1 Heiwajima 6-chome, Ota-ku Tokyo 143-0006 Tel.: +81 3 32989730 Fax: +81 3 37673811



GROHE A/S Nils Hansens vei 20 0667 Oslo

Tel.: +47 22 072070 Fax: +47 22 072071



GROHE Nederland BV Metaalstraat 2 2718 SW Zoetermeer Tel.: +31 79 3680133 Fax: +31 79 3615129



GROHE Portugal Componentes Sanitários, Lda. Rua Arg. Cassiano Barbosa, 539 1.° Frente Esquerdo 4100-009 Porto Tel.: +351 22 543 29 80 Fax: +351 22 543 29 99



GROHE Polska Sp. z.o.o. Pulawska 182 Street 02-670 Warszawa Tel.: +48 22 5432 640 Fax: +48 22 5432 650



Представительство Grohe AG

Москва,ул.Русаковская 13,стр.1

1107140

тел.: +7 495 9819510 факс: +7 495 9819511



Grohe AG Reprezentanta Strada Nicolae lorga 13, Corp B 010432 Bucuresti (Sector 1) Tel.: +40 21 2125050 Fax: +40 21 2125048

S

GROHE A/S Kungsängsvägen 25 753 23 Uppsala Tel.: +46 771 141314 Fax: +46 771 141315



GROSAN inženiring d.o.o. Slandrova 4 1000 Ljubljana Tel.: +386 1 5633060 Fax: +386 1 5633061



GROME Ic ve Dis Ticaret Ltd. Sti. Bagdat Cad. Ugras Parlar Is Merkezi No: 605, B Blok D: 12 - 15 34846 Cevizli - Maltepe-Istanbul Tel.: +90 216 4412370 Fax: +90 216 3706174



Представництво Grohe AG в Україні Вул. Івана Франка, 18-А 01030 Київ

тел.: +38 044 537 52 73 факс: +38 044 590 01 96



GROHE America Inc. 241 Covington Drive Bloomingdale Illinois, 60108 Tel.: +1 630 5827711

Fax: +1 630 5827722

Eastern Mediterranean Middle East - Africa Area Sales Office:

GROME Marketing (Cyprus) Ltd. 195B. Old Nicosia-Limassol Road Dhali Industrial Zone P.O. Box 27048 1641 Nicosia

Tel.: +357 22 465200 Fax: +357 22 379188

Far East Area Sales Office: GROHE Pacific Pte. Ltd. 438 Alexandra Road # 06-01/04 Alexandra Point Singapore 119958

Tel.: +65 6376 4500 Fax: +65 6378 0855



ENJOY WATER®