

Round Sealed Fixed Shower Head & Arm


Waterfall Round Sealed Fixed Shower Head & Arm



GENERAL INFORMATION

Pattern No. key :CP = Chrome Plate

Size	Pattern No.	Pack 1 Qty	Code	Barcode	Discontinued	
NA	Shower Kit CP	1	4S4527	5013866053269	27/02/2012	

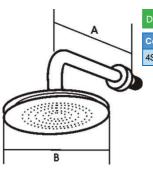

DIMENSIO	NS (mm)		
Code	Description	A	В
4S4527	WATERFALL CP ROUND SEALED FIXED SHOWER HEAD & ARM	340	200


PRESSURE & TEMPERATURE

		Maximum Cold Working Pressure (bar)	Maximum Hot Working Pressure (bar)	
WATERFALL CP ROUND SEALED FIXED SHOWER HEAD & ARM	1.0 bar	<u> </u>	4.0 bar at temperatures up to 85°C	

SPARES



1	1										
	Pattern / Size Description					Code Barcode		Date From		Date To	
	Shower Kit CP / NA SHR5CP SHOWER HEAD ROSE CH			CHR	OME 8		854179	5013866071249		01/01/1900	current
	2										
	Pattern / Size		Description	Code E		Ва	arcode		Date From		Date To
	Shower Kit CP / NA		C2 CONNECTOR	854180		5013866071256		01/01/1900		current	
	3										
	Pattern / Size D		Description		Code		Barcode		Dat	e From	Date To
	Shower Kit CP / NA SA3C		3CP SHOWER ARM 85418		854189	5013866071348		01/0	1/1900	current	



To maintain the surface finish, simply wipe occasionally with a mild detergent on a soft damp cloth. Dry, using a soft cloth. Never use abrasive cleaners or chemical household cleaners and avoid contact with concentrated bleach.

No regular maintenance is required for this product.

In case of complete replacement Pegler recommend service valves should be fitted to the supply inlets.

For any further help or replacement parts please contact the Service Support Team on 0800 1560050.

It is important to ensure that the water supplies to your shower are connected in accordance with the water regulations (WRAS) requirements and good plumbing practice.

The shower head of any shower hose pipe should be fitted by a fixed or sliding attachment so that it can be discharged as a point not less that 25mm above the spill over level of bath tray or fixed appliance.

Luxury Taps and Mixers

Pegler Yorkshire Customcare 5 Year Guarantee - Terms and Conditions

Product are subject to a 5 year guarantee that is between Pegler Yorkshire and the final purchaser of the product.

The guarantee is subject to proof of purchase being supplied.

This guarantee does not affect any statutory rights the consumer may have in law.

The guarantee covers manufacturing or material defects and does not cover parts subject to normal wear and tear.

Finishes other than chrome are covered for a period of 3 years only and the guarantee on the finish is subject to the cleaning instructions being followed.


The guarantee is not applicable where the product is fitted contrary to the conditions in the fitting instructions.


Abusive behaviour and accidental damage to the product are not covered by this guarantee.

The extent of this liability is limited to the cost of the replacement of the defective item and not to fitting or consequential damages.

Your Guide to the installation, care and maintenance of

Waterfall Fixed Shower Head & Arm

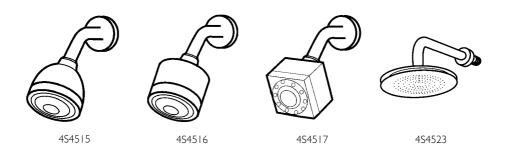

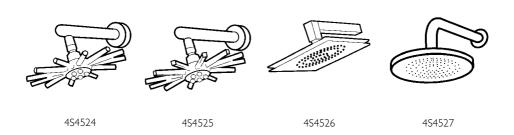



Pegler Limited, St. Catherine's Avenue, Doncaster, South Yorkshire. DN4 8DF Telephone: 01302 560560 Fax: 01302 560109

rices and delivery to your door visit MyTub Ltd - 0845 303 8383 - www.mytub.co.uk - info@mytu

Water Regulations Requirements:

It is important to ensure that the water supplies to your shower are connected in accordance with the water regulations (WRAS) requirements and good plumbing practice.

Bylaw 17 (2) B

The shower head of any shower hose pipe should be fitted by a fixed or sliding attachment so that it can only be discharged at a point not less than 25mm above the spill-over level of bath tray or fixed appliance.


PLEASE NOTE:


The correct type of wall fittings are used to ensure ridgity of the slider rail, ridged riser, fixed head shower or wall union. The correct plumbing fittings and connections must be used to install the ridgid riser rails, shower heads and wall unions.


Slider Rails are not safety grab rails. Special safety grab rails can be purchased form Pegler ref: No: 4S4531 / 4S4532.

Assembling instructions (Type 1) 4S4523, 4S4524, 4S4525, 4S4526, 4S4527,

- 1) Slide wall flange onto the fixed head arm.
- 2) Screw arm into concealed fitting and slide cover upto tiles
- Screw rose onto swivel connection. Screw swivel connection onto shower arm. Ensure seating washers are in place.

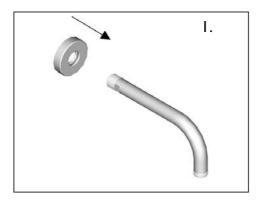


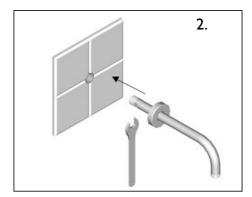


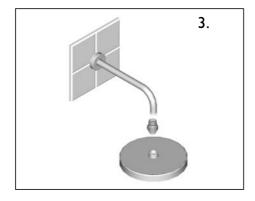

Assembling instructions (Type 2) 4S4515, 4S4516, 4S4517,

- 1) Screw arm into concealed fitting.
- 2) Slide cover upto tiles.

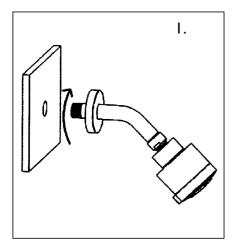

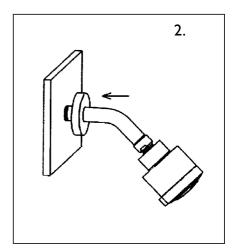

Care and Maintenance

To maintain the surface finishes, simply wipe occasionally with a mild detergent on soft damp cloth. Dry using soft cloth, never use abrasive cleaners or chemical household cleaners avoid contact with concentrated bleach.

Pegler products are manufactured to the highest standards and should require little or no maintenance. In the unlikely event of any spare part being required, please visit our web site: www.pegler.co.uk or contact your nearest stockist or the Pegler Technical Office on telephone number 0870 1200285.



experience design innovation

For further information, please contact your appropriate sales office.

HEAD OFFICE UK

Pegler Limited, Northern team: St Catherine's Avenue, Tel: 0870 | 20028 | Doncaster. Fax: 01302 560108

South Yorkshire DN4 8DF.

Tel: 01302 560560 Southern team: Fax: 01302 367661 Tel: 0870 1200282 Fax: 01302 560458 Internet: www.pegler.co.uk

EXPORT

Western team: Tel: 44 (0) I 302 855656 Tel: 0870 | 200283 Fax: 44 (0) 1302 730513 Fax: 01302 560109

Email: export@pegler.co.uk Email: uk.sales@pegler.co.uk

Technical customcare line 0870 | 200285

www.pegler.co.uk

