



## AFTERCARE INSTRUCTIONS

Your fitting has a high quality finish and should be treated with care to preserve the visible surfaces. All surface finishes will wear if not cleaned correctly, the only safe way to clean your mixer is to wipe with a soft damp cloth. Stains can be removed using washing up liquid. All bath cleaning powders and liquids will damage the surface of your fitting - even non-scratch cleaners.

## GUARANTEE

All products are manufactured to the highest standards and a 5 year guarantee covers any defect in manufacture.

**NOTE:** The 5 year guarantee on the valve is invalidated if damaged by any waterborne debris.

*In the interests of continuous product development we reserve the right to alter specification as necessary.*

**PRODUCT CODE: SN BAS C, SN BID C**  
**TELEPHONE HELPLINE: 0870 4425553**

Bristan Group Ltd  
Birch Coppice Business Park  
Dordon  
Tamworth  
Staffordshire  
B78 1SG  
UK  
A Masco Company

Web Site: [www.bristan.com](http://www.bristan.com)  
Telephone: 0870 4425556  
Facsimile: 0808 1611002  
Email: [enquire@bristan.com](mailto:enquire@bristan.com)

(FI SN BASBID)

(Rev. D1)

(MZ)

## Synergy Basin or Bidet Mixer

## Fitting Instructions & Contents List

Please keep these instructions for future reference and for the ordering of spare parts.




For latest prices and delivery to your door visit MyTub Ltd 0845 303 8383 [www.mytub.co.uk](http://www.mytub.co.uk)

## WATER PRESSURE


This mixer is suitable for use at all supply pressures. However for optimum use both the hot and cold supplies should be reasonably balanced. If the fitting is installed at low pressure (tank fed), then the minimum distance from the outlet of the nozzle to the underside of the cold tank should be approximately 2.0 metres to ensure adequate performance.

This mixer should be installed in compliance with Water Regulations. Where the supplies are unbalanced, i.e. hot water from the cylinder tank/cold from the mains, approved check valves must be fitted in the supply pipes. For further details contact your Local Water Authority.

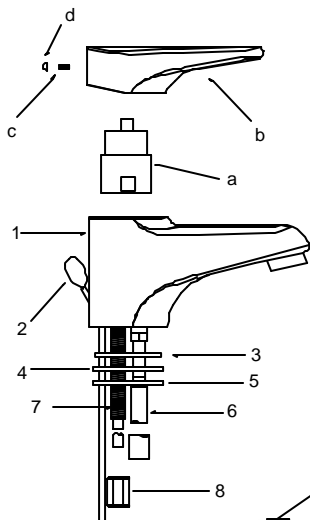

## CONTENTS

1. Mixer body
2. Pop-up operating rod
3. 'O' Ring
4. C-shaped rubber washer
5. C-shaped metal washer
6. Tailpipes (x2)
7. Threaded rod (x2)
8. Nuts (x2)
9. Plug
10. Waste flange
11. Washer
12. Washer
13. Body
14. Horizontal rod
15. Pop up rod link

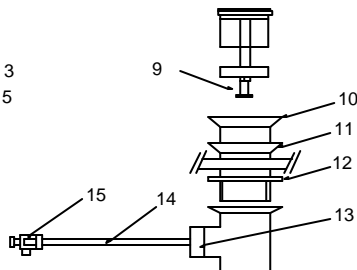

## INSTALLATION

1. Identify all components and check for completeness, particularly before arranging fitting.
2. Fit the mixer body (1) to the basin/bidet using the 'C' plate fixing kit. The 'C' shaped rubber (4) and metal washers (5) go on the underside of the basin/bidet. Secure into position using threaded rods (7) and nuts (8).
3. Fit the inlet connection tailpipes (6) to the fitting and connect the hot and cold supplies.
4. Fit the pop up waste, using washers (11) above & (12) below the basin/bidet and connect it to the mixer. It is recommended that a silicon sealant be applied to both sealing faces of both washers. Adjusting the waste rod (14), pop up rod link (15) and plug (9) adjusting screw to correct position to operate waste.
5. Fully open the mixer in the mid position, letting it run for a few minutes to check all joints and connections for leaks.
6. See over the page for aftercare instructions.

## MAINTENANCE

### If the fitting begins to drip:

1. Turn off the water supply.
  2. Remove indice cap (d), loosen grub screw (c) with 2.5mm hexagon key and then pull off head (b).
  3. Remove cartridge (a).
  4. Clean or replace cartridge, clean and grease seal and refit.
- Note:** that there are locating pins on the bottom of the cartridge that fit in holes inside the tap, to ensure it is fitted the right way round.
5. Replace cartridge and head and turn on the water supply.
  6. Contact our helpline if problem persists.

### PLEASE NOTE:

In the unlikely event you find a part missing please contact our Customer Service helpline on 0870 4425553 for immediate dispatch of part.