

## **Deck Mounted Basin Mixer**




#### Healthcare + Anti Microbial Deck Mounted Basin Mixer

#### GENERAL INFORMATION

Pattern No. key :CU : Polished Brass

Size	Pattern No.	Pack 1 Qty	Code	Barcode
na	Deck Mounted Basin Mixer CU	1	360121	5022050174574

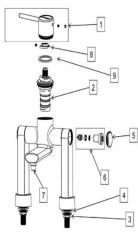

	SPARES										
	1										
	Pattern / Size	scription Code		e Barcode			Date From	Date To			
	Deck Mounted Basin Mixer CU / na	HD15	51 Thermo Handle Antim	icrob	ial	8546	91 5	50220501821	28	01/01/1900	current
			2								
	Pattern / Size	Des	cription			Code Barcode			Date From	Date To	
	Deck Mounted Basin Mixer CU / na	HK1	11 Thermal Cartridge & N	lut C	P 8	35469	97 5	5022050192394		01/01/1900	current
			3								
	Pattern / Size		Description	(	Code	E	3arc	ode	Da	ate From	Date To
	Deck Mounted Basin Mixer CU / na	1	I/2 BN 915L BACKNUT	٤	31707	'4 E	5013	866023385	01	/01/1900	current
			4								
Pattern / Size Description C					Со	de	Barcode		Date From	Date To	
	Deck Mounted Basin Mixer CU / na	ARW2	1/2 ANTI ROTATIONAL	WAS	SHER	8 814162 5013866056758 01/01/1		01/01/1900	current		
			5								
	Pattern / Size Description Code Barcode Date From Date						Date To				
	Deck Mounted Basin Mixer CU / na	CI	P4 End Cap Antimicrobia	ıl	8546	692	5022	2050192752	0	1/01/1900	current
			6								
	Pattern / Size		Description	Cod	le	Barcode		Dat	e From	Date To	
	Deck Mounted Basin Mixer CU / na		SK32 Service Kit	8546	593	5022050192967		01/0	)1/1900	current	
			7								
	Pattern / Size	Desc	ription			Code Barcode			Date From	Date To	
	Deck Mounted Basin Mixer CU / na	FS70	Flow Straightener Antin	nicrol	bial	8546	94	50220501934	138	01/01/1900	current
	8										
	Pattern / Size	Des	scription		С	ode	Ва	arcode		Date From	Date To
	Deck Mounted Basin Mixer CU / na	nted Basin Mixer CU / na			8	854741 5022050349569		9 (	01/01/1900	current	
	9										
	Pattern / Size	De	escription		Coc	le	Bar	code	D	ate From	Date To
	Deck Mounted Basin Mixer CU / na FL43 Cartridge Flange Ring 854740 5022050349545 01/01/1900 curren					current					
ĺ	CARE & MAINTENANCE										

To maintain the surface finish, simply wipe occasionally with a mild detergent on a soft damp cloth. Dry, using a soft cloth. Never use abrasive cleaners or chemical household cleaners and avoid contact with concentrated bleach.

No regular maintenance is required for this product.

In case of complete replacement Pegler recommend service valves should be fitted to the supply inlets.

For any further help or replacement parts please contact the Service Support Team on 0800 1560050.

#### **Luxury Taps and Mixers**

#### Pegler Yorkshire Customcare 5 Year Guarantee - Terms and Conditions

Product are subject to a 5 year guarantee that is between Pegler Yorkshire and the final purchaser of the product.

The guarantee is subject to proof of purchase being supplied.

This guarantee does not affect any statutory rights the consumer may have in law.

The guarantee covers manufacturing or material defects and does not cover parts subject to normal wear and tear.

Finishes other than chrome are covered for a period of 3 years only and the guarantee on the finish is subject to the cleaning instructions being followed.


The guarantee is not applicable where the product is fitted contrary to the conditions in the fitting instructions.


Abusive behaviour and accidental damage to the product are not covered by this guarantee.

The extent of this liability is limited to the cost of the replacement of the defective item and not to fitting or consequential damages.

# **Performa**HEALTHCARE+



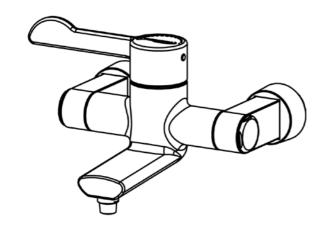

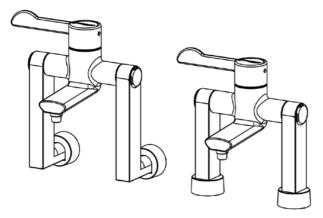

## THERMOSTATIC MIXER TAPS

#### INSTALLATION, CARE & MAINTENANCE

#### MODELS COVERED:

360100 THERMOSTATIC WALL MOUNT BASIN MIXER 360101 THERMOSTATIC DECK MOUNT BASIN MIXER 360102 THERMOSTATIC RETROFIT MOUNT BASIN MIXER

360120 ANTI-MICROBIAL THERMOSTATIC WALL MOUNT BASIN MIXER
360121 ANTI-MICROBIAL THERMOSTATIC DECK MOUNT BASIN MIXER



#### ANTIMICROBIAL BENEFITS

Antimicrobial copper is the material on the touchable surfaces that continuously kills 99.9% of bacteria within 2 hours of contact. These include MRSA, Vancomycin-resistant Enterococcus faecalis (VRE), Staphylococcus aureus, Enterobacter aerogenes, Pseudomonas aeruginosa and E. Coli 0157:H7.

#### **IMPORTANT**

- Care must be taken during installation to prevent any risk of damage to the product or injury to installer
- Installation must be carried out by a qualified and competent person and in accordance with the instructions supplied
- Installations must comply with all local and national water authority regulations, and building/plumbing regulations
- Please ensure that you have read and understood all sections of this manual before installation

### **CONTENTS**


1.0 BEFORE YOU START	4
1.1 IN THE BOX	4
1.2 TOOLS REQUIRED	4
1.3 GUIDELINES	5
2.0 INSTALLATION	6
2.1 MOUNTING THE TAP	6
2.3 CALIBRATION	7
3.0 SERVICING	9
3.1 CLEANING THE TAP	9
3.2 CARTRIDGE CLEANING	10
3.3 FILTER, CHECK VALVE & FLOW RESTRICTOR CLEANING & REPLACEMENT	12
4.0 FURTHER INFORMATION	15
4.1 SAFETY NOTICES	15
4.2 PRESSURE AND TEMPERATURE DETAILS	16
4.3 COMMISSIONING THERMOSTATIC MIXING VALVES	16
4.4 IN-SERVICE TESTING & MAINTENANCE	17
4.5 FREQUENCY OF IN-SERVICE TESTS	18
4.6 OTHER STATUTORY INFORMATION	19
4.7 PRODUCT DIMENSIONS	21
4.8 PRODUCT SPARES	22
5.0 CUSTOMER REFERENCE SHEET	23

#### 1.0 BEFORE YOU START


#### 1.1 IN THE BOX

This box contains an assembled H2 tap (versions shown below), this instruction manual and a filter housing removal tool

#### **Chrome Versions**

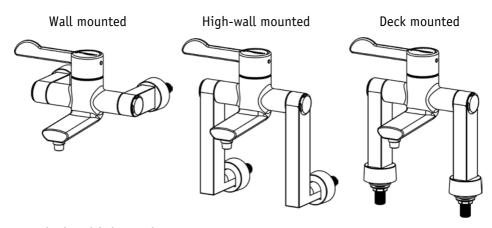

#### **Antimicrobial Versions**

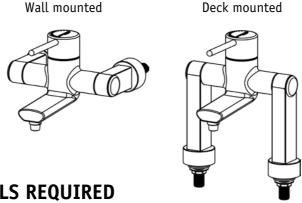

#### 1.3 TOOLS REQUIRED

✓ FILTER HOUSING REMOVAL TOOL (INC.) ☐ 1.5mm ALLEN KEY ☐ FLAT-BLADE SCREWDRIVER ☐ 2.5mm ALLEN KEY ☐ 13mm SPANNER ☐ 3.0mm ALLEN KEY ☐ 26mm SPANNER 7 22-32mm HOLE SAW ☐ 40mm SPANNER ¬ SPIRIT LEVEL ☐ 30mm TORQUE SPANNER ☐ DIGITAL THERMOMETER

#### 1.4 GUIDELINES

When installing your mixer tap, it is recommended that the following guidelines are followed:

- 1) The products are supplied with the hot inlet on the left and cold on the right when viewed from the front; the connection of hot and cold water must be supplied to the appropriate inlet for these products to work correctly
- 2) Ensure all pipe work has been thoroughly flushed before any installation takes place (see p.20 for more information)
- **3)**Ensure that there is sufficient space to install the product without hampering its operation
- **4)**The lever is fixed by a screw located at rear or handle; access to this is required for removing handles during maintenance and servicing
- **5)**The product should be installed in such a position that as well as normal use, commissioning and testing can be undertaken
- **6)** Balanced pressures are required for optimum flow rate and performance
  - i) Establish the water pressure of incoming hot and cold supplies
  - **ii)** If pressure indifference of 5:1 or more, then a PRESSURE REDUCING VALVE must be used

For more information on PRESTEX pressure reducing valves. visit www.peqleryorkshire.co.uk


7) Turn on water and check for leaks


#### 2.0 INSTALLATION


Remove NAMES OF PARTS page from this booklet for quick reference during INSTALLATION and MAINTENANCE


#### 2.1 MOUNTING THE TAP

- 1) Remove DRILL-GUIDE from this booklet and along with a SPIRIT LEVEL if required, drill 2x holes horizontally in desired location using 22-32mm HOLE SAW
- 2)Turn HANDLE 1 to OFF position (Fig. 1)
- 3) Remove the two PROTECTIVE CAPS2 from the THREAD TAILS 3 (Fig. 2)
- 4) Slide the ISOLATION COVERS 4 away from the THREAD TAILS 3 to expose the ISOLATION VALVES 5 (Fig. 3)
- 5) Ensure ISOLATION VALVES 5 are in the ON position, using FLAT-BLADE SCREWDRIVER (Fig. 4)

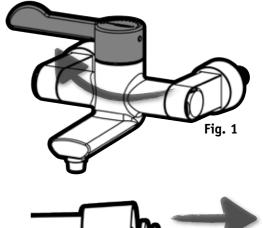

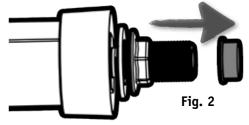

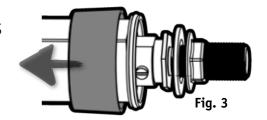

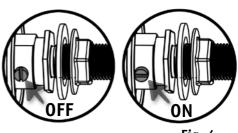

- 6) Locate THREAD TAILS 3 into the pre-drilled holes, ensuring the RUBBER SEAL 6 is between the TAP and the MOUNTING SURFACE (Fig. 5) and secure BACK-NUTS 7 firmly using 26mm SPANNER
- 7) Connect hot and cold water supplies to correct THREAD TAILS
  3 hot on left and cold on right when viewed from the front (Fig. 6)
- 8) Slide ISOLATION COVERS 4 back towards the MOUNTING SURFACE (Fig. 7)


# Do NOT seal the tap to the mounting surface


10) Turn ON the water supply and turn the tap OFF to check for leaks


#### 2.3 CALIBRATION


If water temperature when tap is on full does not measure 39-41°C with a DIGITAL THERMOMETER after running for 2 minutes, the tap **MUST** be calibrated using the following steps:

1) With the water running at maximum, remove the PLASTIC CAP
8 (chrome versions only) and loosen the HANDLE SCREW 9 from the rear of the handle using 3mm ALLEN KEY (Fig. 8)

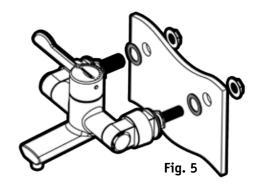

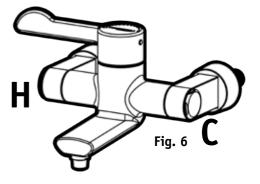

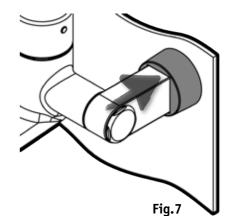

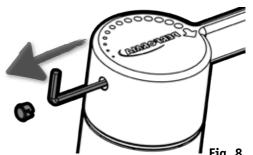

- 2)Remove HANDLE 1 from the tap by lifting it upwards (Fig. 9)
- **3)**Remove HANDLE STOPPER SCREW **10** using 1.5mm ALLEN KEY from SECURING HOLE **11** (Fig. 10)
- 4) Rotate HANDLE STOPPER 12 into TURN LOCKING POSITION and insert HANDLE STOPPER SCREW 10 into ROTATION LOCK HOLE 13 (fig. 11), ensuring the HANDLE STOPPER 12 is locked in position
- 5) Insert 2.5mm ALLEN KEY into the RING NUT 14 at the top of the CARTRIDGE 15 and whilst holding ALLEN KEY firm, loosen the RING NUT 14 using 13mm SPANNER (fig. 12)
- 6) Turn ALLEN KEY anti-clockwise to increase water temperature, or clockwise to decrease temperature, until outlet temperature is within 39-41°C (Fig. 12)
- **7)** Retighten the RING NUT **14** and ensure the temperature doesn't change

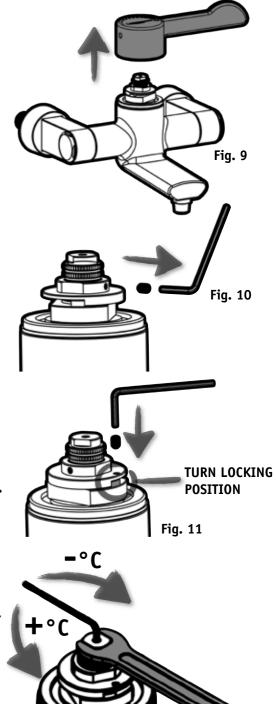


Fig. 12


- 7) Remove HANDLE STOPPER SCREW 10 from ROTATION LOCK HOLE 13 (Fig. 13)
- 8) Insert HANDLE STOPPER SCREW 10 into SECURING HOLE 11, making sure HANDLE STOPPER 12 stays in the TURN LOCKING POSITION (Fig. 14)
- 9) Replace the HANDLE 1, turn the water OFF (Fig. 15)
- 10) Re-align the HANDLE 1 by removing and replacing to make it parallel to the wall and refit HANDLE SCREW 9 and PLASTIC CAP 8 (if applicable) (Fig. 16)

# 3.0 SERVICING 3.1 CLEANING THE TAP

The tap can be cleaned using a soft, damp cloth


Do NOT use any abrasive cleaners with chrome versions


The antimicrobial version can be cleaned with standard hospital cleaners that do NOT leave a residue

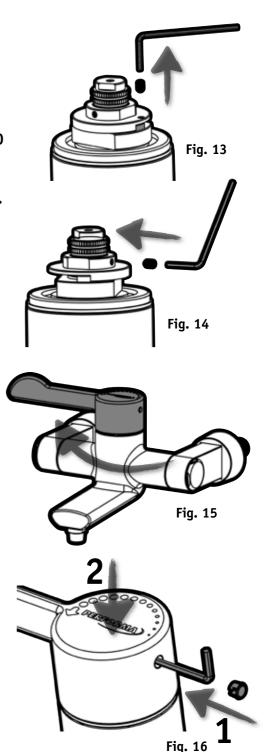


#### 3.2 CARTRIDGE CLEANING

1)Turn HANDLE 1 to OFF position (Fig. 17)

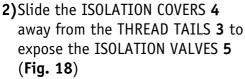

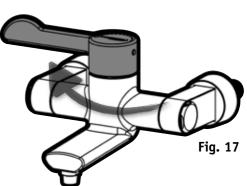

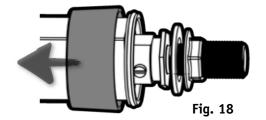

3) Ensure the ISOLATION VALVES 5 are in the OFF position, using FLAT-BLADE SCREWDRIVER (Fig. 19)

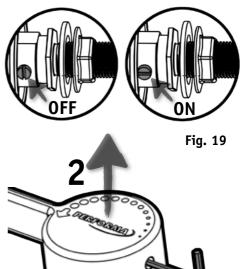


Fig. 20

**4)**Remove the PLASTIC CAP **8** (*if* applicable) and loosen the HANDLE SCREW **9** from the rear of the handle using 3mm ALLEN KEY and remove the HANDLE **1** (**Fig. 20**)

- **5)**Ensure that the position of the HANDLE STOPPER **12** is clearly marked in relation to the CARTRIDGE SPINDLE **16** (**Fig. 21**) using appropriate marker pen
- 6) With the CARTRIDGE SPINDLE 16 and HANDLE STOPPER 12 turned fully clock-wise, use 1.5mm ALLEN KEY to remove the HANDLE STOPPER SCREW 10 (Fig. 22) and HANDLE STOPPER 12 (Fig. 23)
- **8)**Unscrew the CARTRIDGE FLANGE **17** using 30mm SPANNER and remove it along with the CARTRIDGE **15** (**Fig. 24**)


**NOTE:** Removing the CARTRIDGE **15** will require significant force


**9)**Clean the CARTRIDGE **15** using warm water

Do NOT dismantle any part of the THERMOSTATIC CARTRIDGE

Do NOT use any solvents or surfactants

Do NOT twist the CARTRIDGE SPINDLE relative to the CARTRIDGE if this occurs rotate the SPINDLE fully anti-clockwise whilst holding the CARTRIDGE

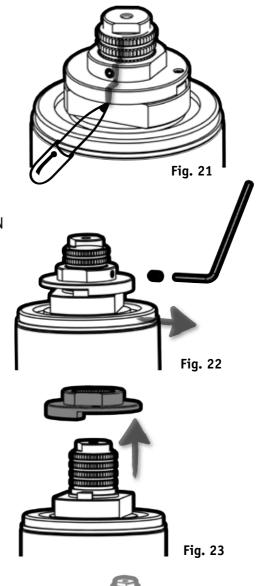


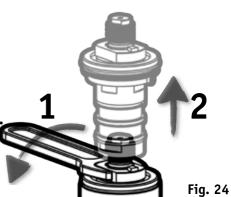


- 10) Refit the CARTRIDGE 15 into the body, ensuring the ALIGNMENT PIN 18 locates correctly and push down firmly (Fig. 25)
- 11) Screw the CARTRIDGE FLANGE 17 into place using 30mm TORQUE SPANNER, applying 80Nm torque (Fig. 26)
- 12) Refit the HANDLE STOPPER 12 using the alignment marks and tighten the HANDLE STOPPER SCREW 10 using 1.5mm ALLEN KEY (Fig. 27)

**NOTE:** If the CARTRIDGE SPINDLE **16** has been reset to fully anti-clockwise then it will be necessary to turn the spindle half a turn clockwise to allow the stopper to drop into its correct location

13) Carry out the CALIBRATION process (section 2.3)

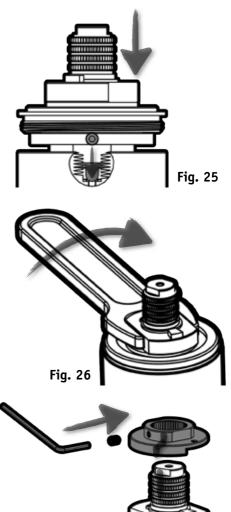


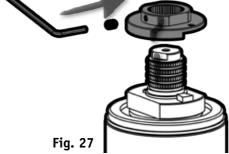


#### 3.3 FILTER, CHECK VALVE & FLOW RESTRICTOR **CLEANING & REPLACEMENT**

To replace the CHECK VALVES:


1) Slide the ISOLATION COVERS 4 away from the THREAD TAILS 3 to expose the ISOLATION VALVES 5 (Fig. 28)

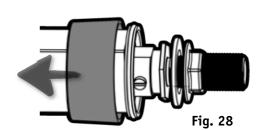

- 2) Ensure that the ISOLATION VALVES **5** are in the OFF position. using FLAT-BLADE SCREWDRIVER (Fig. 29)
- 3) Remove the END CAPS 20 using 40mm SPANNER (Fig. 30)

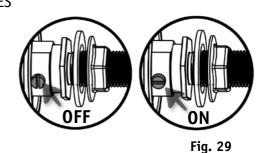

4) Using the FILTER HOUSING REMOVAL TOOL (provided), turn the FILTER HOUSING 21 housing 1/4 turn to make it pop out and recover the O-RING if it is left in (Fig. 31)

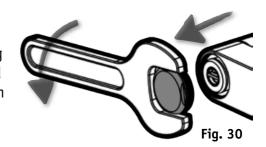

5) The FILTER HOUSING 21 can be cleaned with warm water

Do NOT use any solvents or surfactants

To deeper clean or replace FILTER,

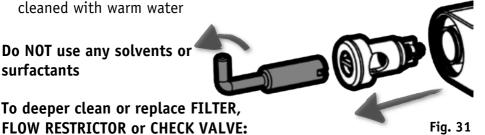


Fig. 32


1) Insert the bent end of the FILTER HOUSING REMOVAL TOOL (provided) through the hole in the side of the FILTER HOUSING 21 and gently push all the components out (Fig. 32)

2) Wash the components with warm water


Do NOT use solvents or surfactants

#### To reassemble:

1) Insert the FILTER MESH 22 into the end of the FILTER HOUSING 21, ensuring that it remains flat (Fig. 33)

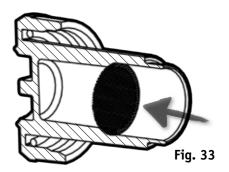

2) Insert the FLOW RESTRICTOR 23 into the FILTER HOUSING 21, ensuring correct alignment and orientation, to push the FILTER MESH 22 down the bore of the FILTER HOUSING 21 to the internal step of the FILTER HOUSING 21 (Fig. 34)

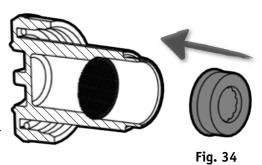

3) Insert the CHECK VALVE 19, ensuring correct orientation and that it projects from the end of the FILTER HOUSING 21, (Fig. 35) then place the O-RING on the end of the FILTER HOUSING 21 (Fig. 36)

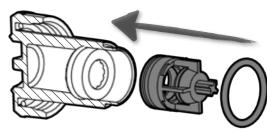


Fig. 35

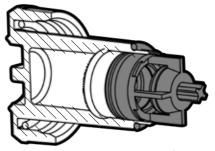


Fig. 36

4) Insert the FILTER HOUSING 21
into the end of the ARM LINER 24,
ensuring correct orientation and
refit the END CAP 20 using 38mm
SPANNER (Fig. 37)

NOTE: The END CAP 20 will screw
easily by hand if everything is
correctly assembled

#### 4.0 FURTHER INFORMATION

#### **4.1 SAFETY NOTICES**

This tap will give continued safe performance, provided it is installed, commissioned, operated and maintained in accordance with recommendations given in this manual and if Type 3 valves are only used for applications covered by their approved designations.

Provided that the TMV is installed, commissioned, operated within the specification limits and maintained according to the manual, the risk of malfunction, if not eliminated, is considerably reduced.

Malfunction of TMVs is almost always progressive in nature and will be detected by the use of proper temperature checking and maintenance routines.

Ultimately, the use or attendant must exercise due diligence to ensure that the delivery of warm water is at a stable, safe temperature.

Back-flow prevention devices are built into this product.

#### 4.2 PRESSURE & TEMPERATURE DETAILS

Key: High pressure (HP) Low pressure (LP)

The thermostatic basin mixers use the following designations:

Code	Operating Pressure	Application		
HP-WE	НР	Washbasin Economy		

#### Table 1: Normal conditions of use for Type 3 valves

	High Pressure
Maximum static pressure (bar)	10
Flow pressure - hot & cold (bar)	1.0 to 5.0
Hot supply temperature (°C)	52-65
Cold supply temperature (°C)	5-20
Minimum temperature differential (°C)	10

#### Table 2: Mixed water temperature

Application	Mixed water temperature at point of discharge (°C)		
Washbasin economy	41		
NOTE 1: For washbasins, washing under	r running water is assumed		

#### 4.3 COMMISSIONING THERMOSTATIC MIXING VALVES

#### **PURPOSE**

Since the installed supply conditions are likely to be different from those applied in the laboratory tests it is appropriate, at commissioning to carry out some simple checks and tests on each mixing valve to provide a performance reference point for future in-service tests.

#### **PROCEDURE**

Check that:

- a) The designation of the thermostatic mixing valve matches the intended application
- b) The supply pressures are within the range of operating pressures for the designation of the valve
- c) The supply temperatures are within the range permitted for the valve and by guidance information on the prevention of legionella etc

Adjust the temperature of the mixed water in accordance with the manufacturer's instructions and the requirement of the application and then carry out the following sequence (using calibrated measuring equipment):

- a) Record the temperature of the hot and cold water supplies
- b) Record the temperature of the mixed water at the largest draw-off flow rate
- c) Record the temperature of the mixed water at a small draw-off flow rate, which shall be measured
- d) Isolate the cold water supply to the mixing valve and monitor the mixed water temperature
- e) Record the maximum temperature achieved as a result of (d) and the final stabilised temperature

**NOTE:** The final stabilised mixed water temperature should not exceed the values in Table 17

f) Record the equipment, thermometer etc. used for the measurements

# Table 17: Guide to maximum stabilised temperatures recorded during site tests

Application	Mixed water temperature
Washbasin economy	41

#### 4.4 IN-SERVICE TESTING AND MAINTENANCE

#### **PURPOSE**

The purpose of in-service tests is to regularly monitor and record the performance of the thermostatic mixing valve. Deterioration in performance can indicate the need for service work on the valve and/or the water supplies.

#### **PROCEDURE**

Using calibrated measuring equipment or equipment to the same specification as used in the commissioning of the valve, adjust the temperature of the mixed water in accordance with the manufacturer's instructions and the requirement of the application. Carry out the following sequence:

- a) Record the temperature of the hot and cold water supplies
- b) Record the temperature of the mixed water at the largest draw-off flow rate
- c) Record the temperature of the mixed water at a smaller draw-off flow rate, which shall be measured

rices and delivery to your door visit MyTub Ltd  $\stackrel{17}{ ext{-}}$  0845 303 8383 - www.mytub.co.uk - info@mytu

If the mixed water temperature has changed significantly from the previous test results (e.g. >1K), record the change and before re-adjusting the mixed water temperature check:

- a) That any integral strainers are clean
- b) Any in-line or integral check valves or other anti-back siphonage devices are in good working order
- c) Any isolating valves are fully open

With an acceptable mixed water temperature, complete the following procedure:

- a) Record the temperature of the hot and cold water supplies
- b) Record the temperature of the mixed water at the largest draw-off flow rate
- c) Record the temperature of the mixed water at a smaller draw-off flow rate, which shall be measured
- d) Isolate the cold water supply to the mixing valve and monitor the mixed water temperature
- e) Record the maximum temperature achieved as a result of (d) and the final stabilised temperature
- f) Record the equipment, thermometer etc. used for the measurements

If at step (e) the final mixed water temperature is greater than the values of Table 17 and/or the maximum temperature exceeds the corresponding value from the previous results by more than about 2K, the need for service work is indicated

**NOTE:** In-service tests should be carried out with a frequency, which identifies a need for service work before an unsafe water temperature can result. In the absence of any other instruction or guidance, the procedure described in Annex F of D 08 may be used

#### 4.5 FREQUENCY OF IN-SERVICE TESTS

#### **GENERAL**

In the absence of any other instruction or guidance on the means of determining the appropriate frequency or in-service testing, the following procedure may be used:

- a) 6-8 weeks after commissioning, carry out the tests detailed in 'In-Service Tests'
- b) 12-15 weeks after commissioning, carry out the tests detailed in 'In-Service Tests'

Depending on the results of the above tests, several possibilities exist:

- a) If **no significant changes** (e.g. ±1K) in mixed water temperatures are recorded between commissioning and 6-8 week testing, or between commissioning and 12-15 week testing the next in-service test can be deferred to **24-28 weeks** after commissioning. If **small changes** (e.g. 1-2K) in mixed water temperatures are recorded in **only one of these periods**, necessitating adjustment of the mixed water temperature, then the next in-service test can be deferred to **24-28 weeks** after commissioning.
- b) If small changes (e.g. 1-2K) in mixed water temperatures are recorded in both of these periods, necessitating adjustment of the mixed water temperature, then the next in-service test should be carried out at 18-21 weeks after commissioning.

The general principle to be observed after the first 2 or 3 in-service tests is that the intervals of future tests should be set to those which previous tests have shown can be achieved with no more than a small change in mixed water temperature.

#### 4.6 OTHER STATUTORY INFORMATION

#### WATER REGULATIONS REQUIREMENTS

It is important to ensure that the water supplies to your taps and mixers are connected in accordance with the water regulations (WRAS) requirements and good plumbing practice.

It is Pegler Yorkshire's recommendation and good practice that the supplies of hot and cold water to the products should be at equal (balanced) pressures in order to provide a consistent flow. Supplies should be from a common source, wither mains or tank fed. If supplies are not equal pressures than pressure reducing valves must be fitted.

The installation of any thermostatic product must comply with the requirements of the Water Supply (Water Fittings) Regulations 1999.

#### **REGULATION G15.14**

Submerged inlets to baths or washbasins in any house or domestic situation are considered to be a fluid category 3 risk; they should be supplied with water from a supply or distributing pipe through a double check valve. Submerged inlets to baths or washbasins in other than a house or domestic situation, and sinks in any location, are considered to be a fluid category 5 risk and appropriate back-flow protection is required for this level of risk.

This product has been designed to function on all types of water systems.

Please note: If a pump is to be installed to boost gravity supplies, please refer to the pump manufacturers instructions.

The hot and cold inlets for any of the products are hot on the left and cold on the right when viewed from the front of the fitting. It is our recommendation and good plumbing practice that a service valve (Pegler Yorkshire PB300) should also be installed upstream in the inlet supply lines.

#### PIPE CONNECTIONS

**IMPORTANT:** Before making any inlet pipe connections, all supplies **MUST** be thoroughly flushed to remove any debris. Failure to do so could result in damage or low flow from the mixed tap. It is a requirement of Schedule 2, 13 of the Water Supply (Water Fittings) Regulations 1999 that this function is undertaken before it is first used.

The thermostatic mixer inlet connections are threaded 1/2" BSP.

#### WATER SUPPLY PRESSURES

This Pegler Yorkshire product has been designed to function under the following conditions suitable for use as a Type 3 valve:

- Minimum supply pressure 1.0 bar
- Maximum dynamic supply pressure 5.0 bar
- Recommended dynamic pressure 1.0-3.0 bar

Generous flow rates are achieved at pressures as low as 0.2 bar. At high pressures, it may be necessary to reduce excessive flow rates by fitting a pressure reducing valve in the supply line before the fitting. Using the supplied flow regulator in the outlet of the product will assist its performance also, but will **NOT** negate the need for the pressure reducing valve.

**IMPORTANT:** Products that operate outside these conditions cannot be guaranteed to work/operate by the schemes type three valve.

Maximum pressure differential: 5:1

Minimum temperature (hot/mixed): 10°C difference

#### DISPOSAL OF PACKAGING

The Instapak foam packaging can either be disposed of by landfill, or by incineration by a certified commercial incinerator. Alternatively, it can be returned to the packaging manufacturer for recycling:

Sealed Air Limited

Telford Way


Kettering

Northants

NN16 8UN

Tel: +44-1536-315700

### **4.7 PRODUCT DIMENSIONS**

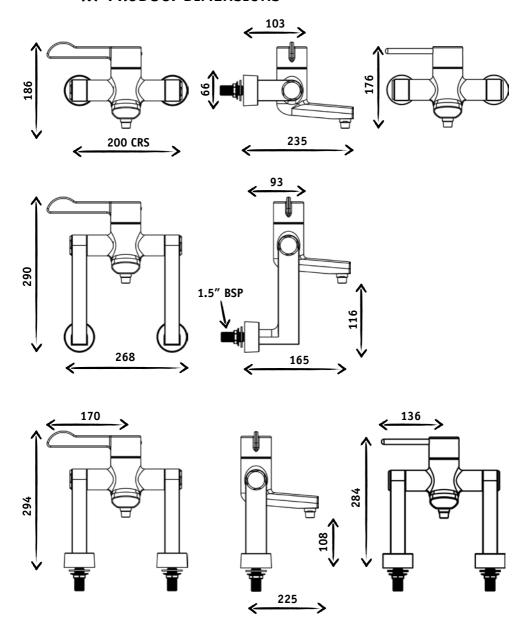

#### **4.8 PRODUCT SPARES**

Name	Image	Description	Code
Handle (chrome version)		Includes chrome handle, handle screw and plastic cap	854699
Handle (antimicrobial version)	••	Includes antimicrobial handle and 2x handle screws	854691
End cap (chrome version)		Includes chrome end cap	854698
End cap (antimicrobial version)		Includes antimicrobial end cap	854692
Water outlet (chrome version)		Includes chrome water outlet and washer	854742
Water outlet (antimicrobial version)		Includes water antimicrobial water outlet and washer	854694
Service kit (x2)	***	Includes 2x of: filter housing, flow restrictor, filter mesh, check valve, filter housing o-ring and arm liner o-ring	854693
Handle stopper		Includes handle stopper and handle stopper screw	854741
Cartridge		Includes cartridge and cartridge flange ring	854697
Cartridge flange ring		Plastic ring that sits on top of cartridge flange and below handle	854740
Anti-rotational stopper		Includes 2x anti-rotational stopper	814162
Backnut	<b>O</b>	Includes 2x backnut	817074

To order spare parts please visit www.pegleryorkshire.co.uk, or phone +44 (0)844 243 4400

#### **5.0 CUSTOMER REFERENCE SHEET**

Date of purchase	
Model type	
Supplier & contact details	
Installer & contact details	
Date of installation	
Location of installation	
Outlet temperature (1st commissioning)	
Serial number (found beneath spout)	

#### **SERVICE DATE LOG**

	Service 1	Service 2	Service 3	Service 4
Year 1	/ /	/ /	/ /	/ /
Year 2	/ /	/ /	/ /	/ /
Year 3	/ /	/ /	/ /	/ /
Year 4	/ /	/ /	/ /	/ /
Year 5	/ /	/ /	/ /	/ /





Meibes Ballorex

Pegler
Prestex
Yorkshire
Kuterlite
Endex
Francis Pegler

#### **UK Sales**

Free Phone: 0800 156 0010 Free Fax: 0808 156 1011

Email: uk.sales@pegleryorkshire.co.uk

#### Export

Tel: +44 (0) 1302 855 656 Fax: +44 (0) 1302 730 513

Email: export@pegleryorkshire.co.uk

#### Technical Help

Free Phone: 0800 156 0050 Free Fax: 0808 156 1012

Email: tech.help@pegleryorkshire.co.uk

#### **Brochure Hotline**

Free Phone: 0800 156 0020 Free Fax: 0808 156 1011

Email: info@pegleryorkshire.co.uk

www.pegleryorkshire.co.uk

Pegler Yorkshire Group Limited St. Catherine's Avenue, Doncaster, South Yorkshire, DN4 8DF, England. Tel: 0844 243 4400 Fax: 0844 243 9870

All brand names and logo styles are registered trademarks. Maintaining a policy of continual product development, Pegler Yorkshire reserves the right to change specifications, design and materials of products listed in this leaflet without prior notice.

